 


Portable Video Player Operation Guide

1


Checking the Included Accessories

1

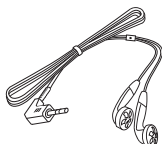

Stereo In-Ear Headphones

2

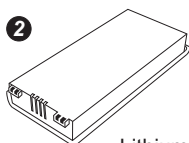


Lithium-Polymer Rechargeable Battery

3




Battery Charging Cradle

4

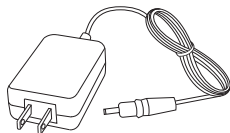

AC Power Adapter

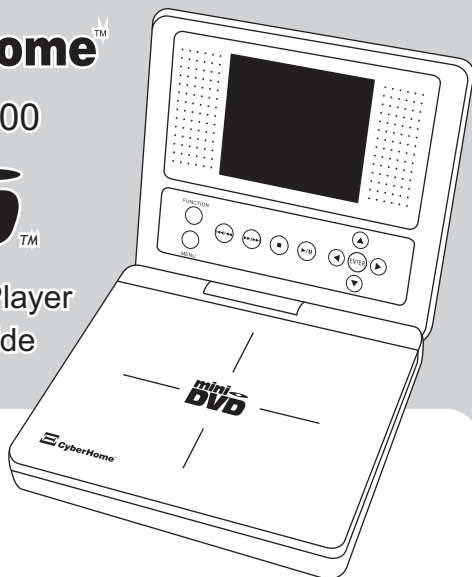


2

Charging the Battery

1 Connect Power to the Charging Cradle.


To Wall AC Power Outlet

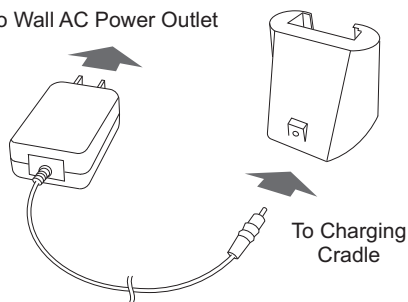

To Charging Cradle


2 Insert the Battery Into the Cradle.

Insert the battery with the label side facing forward towards the front of the charging cradle and the contact pins facing downward.

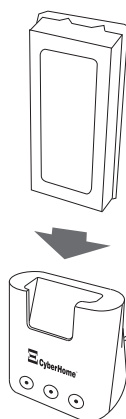

3 The Status Lights Indicate Charging Status

When the battery is inserted, the CHARGE light will glow, indicating that the battery is being charged. When the charging cycle is complete, the FULL light will glow. The battery is now ready to use.

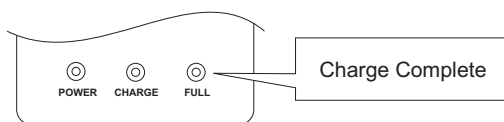

WARNING

To prevent electric shock, do not expose this unit to rain or moisture. Do not place objects filled with liquids on or near this unit.

Do not disassemble. No user-serviceable parts inside. Refer to qualified service personnel for servicing.

When the unit is unused for a long period of time, remove the battery.

Unplug the unit from AC outlet during lightning storms or when unused for long periods of time.

When the unit is not used, turn the power off.

Lithium-polymer batteries are recyclable and must be disposed of properly. For information on recycling of rechargeable batteries in the USA or Canada call toll free 1-800-822-8837 or visit www.rbrcc.org.

Do not handle lithium-polymer batteries that are damaged or leaking.

Use only with the supplied or recommended accessories.

The battery model CH-BAT 390/30-P only use for CyberHome portable mini DVD player, model CH-MDP 2500.

DECLARATION OF CONFORMITY: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that of the receiver
- Consult the dealer or an experienced radio/TV technician for help.


The Federal Communications Commission warns the users that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPECIFICATIONS: Playback functions: Play/Pause, x2-x32 Forward and Reverse Scan, Elapsed Time Display, Disc Memory Play, Multi-Angle, Closed Captions, Parental Control • Operating temperature range: 5 to 35°C (41 to 95°F) • Operating humidity range: 5-90% RH (no condensation) • Discs played: DVD-Video (Mini-DVD format - 8CM) • Signal system: NTSC • LCD screen: TFT, 4:3 Aspect Ratio, 2.5" • Audio output/input level: 1.5 Vrms • Output/input terminal: Stereo mini-jack • Frequency response: DVD (linear audio): 4 Hz-22 kHz (48 kHz sampling), 4 Hz-44 kHz (96 kHz sampling) • Dynamic range (DVD linear audio): 98 dB • Pickup Wave length: 658 nm / 790 nm • Laser power: CLASS II/CLASS I • Power supply: DC 3.6 V (DC IN terminal) / DC 3.6 V (Battery terminal) • Power consumption: 4.68 W, Recharge mode: 9 W (using AC adaptor) • AC adaptor - Power source: AC 100-240 V, 50/60 Hz, Power consumption: 10 W, DC output: 3.6 V, 2500 mA • Battery pack CH-BAT 390/30-P (lithium polymer): Voltage: 3.7 V, Capacity: 3000 mAh • Player dimensions: 102 (W), 112 (D), 30.9 (H) mm • Weight: 273 g (9.64 oz.) • Battery dimensions: 39.4 (W), 90.1 (D), 13.1 (H) mm • Weight: 73 g (2.58 oz.)

Specifications are subject to change without notice. While due caution has been exercised in the production of this document, inadvertent technical inaccuracies or typographical errors are possible and unintentional. While all efforts have been made to ensure accuracy, CyberHome Entertainment will not be held liable for any inaccuracies or errors in the information contained herein.

Part# 2500H

4 The Power LED Blinks to Indicate Low Battery

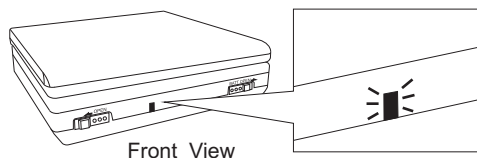


When the battery is low, the power LED on the front of the player will blink. This indicates a remaining battery charge of about 10%.

3

Inserting the Battery

1 Slide the battery into the player as shown with the 4 stripe connector facing inwards.

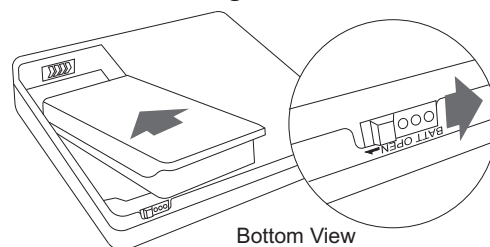


IMPORTANT

Make sure that the BATT OPEN switch is locked in the CLOSED position.

Bottom View

2 To remove the battery, slide the BATT OPEN switch to the open position and lift the battery out.

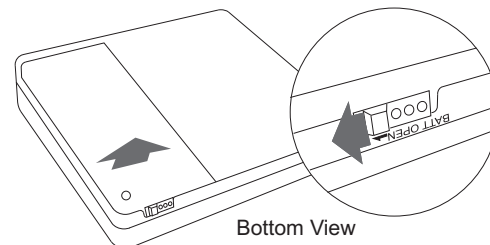


Bottom View

4 Plugging In the Headphones


1 First, Turn the Volume Down

To prevent damage to your hearing, turn the volume down first before plugging in the headphones.

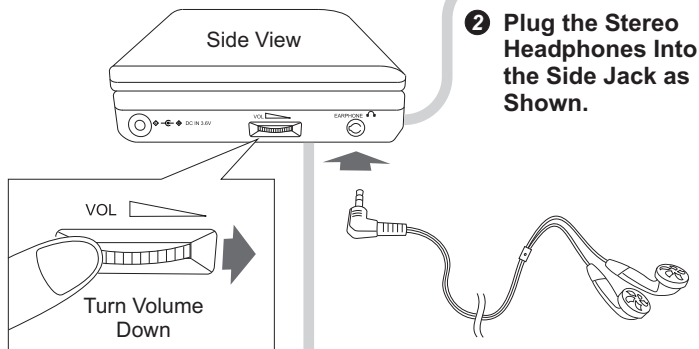

5 Powering On

1 Move the Power Switch to the BATT or DC Position

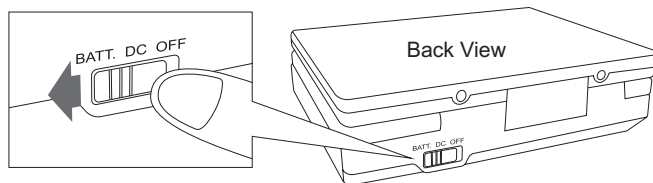



NOTE

To run unit using AC power, make sure unit is plugged in and switch to DC position. Turn the player OFF when not in use.


6 Inserting a Disc

1 Open the Disc Tray

Slide the OPEN switch to the left to open the disc tray cover.

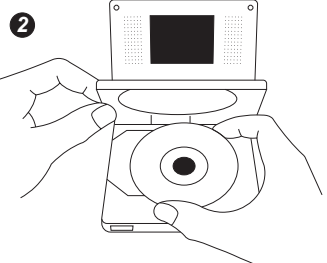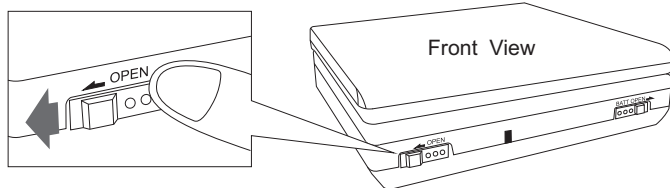

Hold the disc by the EDGES to avoid touching the shiny surface.

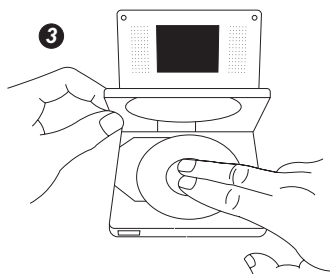

Push the disc down onto the spindle by using your first two fingers in the center of the disc.

7 Mini-DVD Disc Playback

1 Starting Play

Most discs will begin to play after the disc tray cover has been closed. Some discs contain a menu system that allows you to choose from various episodes, chapters or special features. Use the **▲▼◀▶** keys to navigate menus and press **ENTER** to select options and play.

8 Changing Player Settings

FUNCTION



Use the **▲▼◀▶** keys to navigate the menus. Press **ENTER** to select a setting or to cycle through available options.

Subtitles

Use to select subtitles on discs that support this feature.

Display

Displays the Title, Chapter and Elapsed Playback Time on-screen.

Brightness

Use the **◀▶** keys to adjust. Press **ENTER** to cycle through **Brightness**, **Contrast** and **Sharpness** settings.

Audio

Select an audio track on the disc. This feature only works on discs that support multiple audio tracks.

Setup

OSD Language

Sets the language of the Setup Menu and Display Messages.

Screen Saver

Turns the screen saver On or Off.

Memory

Stores current playback location. To use, press **■** twice and turn power off. When turned on, play resumes from where you left off.

Reset

Resets the player settings to factory default settings.

Menu

Default disc menu language for discs supporting this feature.

Audio

Default audio language for discs supporting multiple languages.

Subtitle

Default subtitle language for supporting discs.

Aspect

LCD Aspect Ratio. Set to match the format of the DVD disc.

Angle Mark

On screen display of current angle for discs with multi-angle function.

CC

Closed Captions. Turn On or Off for discs that support this feature.

Parental

Set the parental level to limit playback of discs by children to the level specified. This option requires that the password be set.

Password

Enter or change the password to use with the parental function. Use the **▲▼** keys to enter numbers 0-9. Use the **◀▶** keys to move left or right. Confirm the entered password with the **▶** key. Use the master password **1389** to override any saved value.

Software Ver

Displays the player's firmware version.

2 Pausing Play

Press **▶/||** at any time to pause disc play. Press this button again to resume.

3 Stopping Play

Press **■** at any time to stop disc play. Press **▶/||** to start playback again.

4 Skipping to the Next or Previous Chapter

To skip ahead or return to the next / previous chapter on the disc, press and **HOLD** the **▶/▶▶** or **◀◀◀** key for **2 SECONDS**.

5 Fast Forward and Fast Reverse Scanning


To begin scanning through the disc in forward or reverse mode, press the **◀◀◀** or **▶▶▶** key. Scanning begins at 2X speed. To increase the scanning speed, repeat this procedure. The maximum scanning speed is 32X.

To resume normal playback, press the **▶/||** key.

FUNCTION



MENU

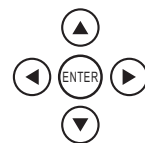

6 Changing Settings

Press **FUNCTION** to change settings for disc playback and player setup.

7 Accessing Disc Menus

Press **MENU** to access the disc menu on Mini-DVD discs that support this feature.

8 Navigating Disc Menus

Use the **▲▼◀▶** keys to move around in disc menus and the player setup screens.

To select and confirm choices in menus, press **ENTER**.